CB Type Intelligent Battery Chargers




With the CB Battery Charger Line, Altech offers a highly reliable battery management solution. Operating at single phase Input Voltages of 115-230-277 VAC, the devices supply an Output of 12VDC and up to 35A or 24VDC and up to 20A.

Equipped with microcontrollers, the CB line offers fully automated multi-stage charging that will expand the battery's life significantly. Several diagnostic and monitoring features ensure easy handling and a high amount of transparency during daily operation.

Altech's CB line battery chargers are based on the switching technology which allows much higher efficiency as well as smaller and lighter devices. Additionally, several standard safety and protection features ensure safe installation and operation.

Features:

- Fully automated charging
- Three charging modes
- · Compact, rugged metal case
- Available in 12VDC and 24VDC
- Suitable for most common battery types
- Adjustable charging current
- Easy battery diagnosis and fault identification either by LED or external devices connected to fault status contacts
- High efficiency up to 91% through switching technology
- Several output protection features such as short circuit, overload, deep battery discharge etc.
- DIN rail mounting
- Small size
- 3 year warranty

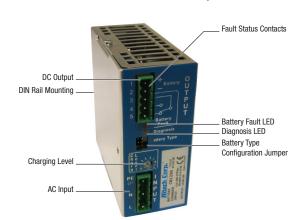

Elex Series

DSB FIEX Series

PS-S Slim Series

SLOW Profile SER

PS Industrial Serv

PSC & W Series

CBI Type

CB Type Chargers

ccessories

Appendix

Battery Selection Chart

1.2 Ah	3.2 Ah	7.2 Ah	12 Ah
20	60	200	400
8	30	120	240
3	15	55	100
2	10	30	60
-	7	20	45
-	3	12	30
-	-	9	20
-	-	7	13
	20 8 3	20 60 8 30 3 15 2 10 - 7 - 3 	20 60 200 8 30 120 3 15 55 2 10 30 - 7 20 - 3 12 - 9

BUFFERING (MINUTE) TIME Via Luigi Barchi 9/B – Reggio Emilia 42124 – Italy

Tel. +39 0522 345518 – Fax +39 0522 345551 – mail: info@adelsystem.it

www.adelsvstem.com

Instruction Manual CB1224xA r6.doc

CB1224xA: Smart Battery Charger


Thank you for having chosen one of our products for your work.

We are certain that it will give the utmost satisfaction and be a notable help on the job.



General Description

The CB series is a "Switching technology" and "Battery Care philosophy" since many years parts of the know-how ADEL system, led to the development of this advanced multi-stage battery charging, completely automatic and suited to meet the most advanced requirements of battery manufacturers. The Battery Care concept is base on algorithms that implement rapid and automatic cycle of battery charging, battery charge optimization during time, flat batteries recovery and real time diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led; during the installation and after sell. Each device is suited for all battery types, jumper selection sets a predefined curves for: Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd and Ni-Mh. A rugged casing with bracket for DIN rail mounting provide IP20 protection degree.



Main Characteristic

- Input: Single-phase 115 230 277 Vac
- Output Battery: charging: 24 Vdc; 3 5 A; 12 Vdc; 3 6 A
- Suited for the following battery types: Open Lead Acid, Sealed Lead Acid, lead Gel and Ni-Cd Ni-Mh (Option).
- Automatic diagnostic of battery status. Charging curve IUoUo, constant voltage and constant current Battery Life Test function (Battery Care)
- Switching technology
 - Three charging levels: Boost, Trickle and Recovery
 - Protected against short circuit, Over Load and inverted polarity
- · Signal output (contact free) for discharged or damaged battery
 - Protection degree IP20 DIN rail; Space saving

Safety and warning notes

WARNING – Explosion Hazard Do not disconnect Equipment unless power has been switched off or the area is known to be non-hazardous.



WARNING – Explosion Hazard. Substitution of components may impair suitability for class I, Division 2. WARNING – Switch off the system before connecting the module. Never work on the machine when it is live. The device must be installed in according with UL508. The device must have a suitable isolating facility outside the power supply unit, via which can be switched to idle. Danger of fatal Injury!

Connection (terminal and wiring):

Cable Connection: The following cable cross-sections may be used:

Cable Collife	Solid	Stranded	AWG	Torque (Nm)	Stripping	1 Phase L N PE	
	(mm²)	(mm²)	7.11.0	rorquo (rum)	Length	Input AC	Input AC
In:	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	700	ri N L
Out:	0.2 – 2.5	0.2 – 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	A6 -+	-+
Signal:	0.2 - 2.5	0.2 - 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	06	8

Use only copper cables that are designed for operating temperatures of > 75 °C. Wiring terminal shall be marked to indicate the proper connection for the power supply.


Via Luigi Barchi 9/B – Reggio Emilia 42124 – Italy

Tel. +39 0522 345518 - Fax +39 0522 345551 - mail: info@adelsystem.it

Instruction Manual CB1224xA r6.doc www.adelsystem.com

Output Power connections:

Normal connection




Typical application:

- One battery (12Vdc) for 12 Vdc Output. Set No Jumper in Pos. 5
- Two battery (12Vdc) for 24 Vdc Output Set Jumper in Pos. 5

(See the table below at the point No. 2.)

Operating and Display Element:



No. 1: Input AC Port pin. L - N:

1 Phase Switching Power Supplies L, N, PE @.

No. 2: Battery Management Configurations

Preliminary Operations: One device for all battery types. Completely automatic, all devices are suitable to charge most batteries types thank to User Selectable charging curves. They can charge open lead acid, sealed lead acid, Gel and Ni-Cd, Ni-Mh batteries. It is possible to change or add other charging curves connecting the device to a portable PC.

Caution: Switch off the system before Setting the jumper.

Battery Type Selection	Jumper Position	Trickle/Float charge (Volt/Cell)	Fast/Bulk charge (Volt/Cell)
Open Lead	1000	2.23	2.40
Sealed Lead Low	1 0 0 0 2 0 0 0 3 0 0 0 4 0 0 0	2.25	2.40
Sealed Lead High	1	2.27	2.40
Gel Battery	1	2.30	2.40
Gel Battery (1)	1	2.30	2.40
NiCd – NiMh (1)	1	10% Imax Trimmer	1.50 – (12V) 10cells 1.50 – (24V) 20cells
Functional Setting			nction
Jumper Fast Charge Enable (2)	1	Jumper present: Fast charge enable Not used in Ni-Cd of	
Output Voltage Configuration (Pos. 5)	1 0 0 0 2 0 0 0 3 0 0 0 4 0 0 0	Jumper Not Preser Jumper present:	nt: 12 V Output 24 V Output
Power Supply Function (Pos. 6) (2)	2000	Jumper Present: Power supply funct	ion enabled.

Notice:

- 1 Be careful, in NiCd-NiMh Option, the Sealed Lead High charging curve is deleted.
 - NiCd-NiMh (Options to be defined by Order). End-of-charge detection at "flat" profile. If flat profile detected is detected fast charge is terminated after 20 min. General end-of-charge timeout set to 16 hours. Trickle charge current is regulated at 10% of max current corresponding to trimmer position. Charging current must be set at least at 30% of nominal battery capacity (0.3 C).
- 2 This function is a hot swap (is possible to enable or disable with mains on).

No. 3: Signal Ports (output Isolated):

Connections for Fault Alarm Relay: Low Battery, Fault connections systems, Battery replacement. Contact: 3,4,5 Relay Contact Rating:

Max.DC1: 30 Vdc 1 A: AC1: 60 Vac 1A: Resistive load (EN 60947-4-1)

Min.1mA at 5 Vdc: Min. permissive load

Signal Output port true table:		Led N°8 Batt	ery Fault
		3-4 Closed	3-5 Closed
Battery or system Fault?	YES NO		■ - led On
Ballery or system Fault?		■ - led off	

Please see the NOTE at the bottom of this page.

No. 4: Battery Connection Port:

Connect the battery between pin. 1 (+) and 2 (-).

One battery (12 Vdc) for 12 Vdc Output;

Two battery (12 Vdc) for 24 Vdc Output;

No. 5: Output Voltage Configuration

This settings must be do with mains off. This jumper set the voltage of the batteries connected at the CB, is most important to check the correct voltage value on the batteries. If is connected a wrong battery the device show the fault indication of 1 blink.

No. 6: Enable Power Supply

This function allow at the Battery Charger to work like a Power Supply. To enable this function the operator must do the followings steps: connect a battery on terminal blocks, switch on mains. A load can be connect in parallel at the battery on the same terminal blocks. The output voltage range is 2.23Volt/Cell. to 2.40Volt/Cell. and the microcontroller do a normal battery recharging cycle. When the diagnosis led shows the status of charging (trickle, boost or recovery) for the battery, is possible to disconnect the battery and the output voltage on the terminal blocks never falls down. When this function is enabled, the Auto Diagnosis of the Battery are disabled (so the fault indication: 1, 2, 3, 4, 5 blinks never will be shown).

Note: Only at the first power on the CB do Auto Diagnosis of the Battery. When the CB switch on a battery must be connected at the output battery, if a battery is not connected at the CB, on the terminal blocks "Output Battery" there is no voltage.

No. 7 and 8 Display Signals

No.8: Led Battery Fault connections systems, Battery Fault.

No.7: Led Diagnosis,

Led Diagnosis, Diagnosis of the system through "blinking code" signal

Monitoring Control Chart:	State	LED Diagnosis (No.7)	LED Battery Fault (No.8)
Charging	Trickle	1 Blink/ 2 sec	OFF
Type	Absorption	1 Blink/sec	OFF
Type	Boost	2 Blink/sec	OFF
	Recovery (*)	5 Blink/sec	OFF
	Reverse polarity or wrong battery voltage (for example: CB set for 24Vdc and battery 12Vdc)	1 Blink/pause JL	ON
	Battery No connected	2 Blink/pause JL	ON
Auto	Element in Short Circuit	3 Blink/pause JM	ON
diagnosis of the system	Alarm Low Battery Voltage: 12Vdc, range 8-10 Vdc ONLY on REQUEST 24Vdc, range 18-21 Vdc	9 Blink/pause JMIL	ON
	Alarm High Battery Voltage: 12Vdc, over 14 Vdc ONLY on REQUEST 24Vdc, over 28 Vdc	10 Blink/pause JML_	ON

NOTE: (*) In Recovery the LED Battery Fault (No.8) is OFF but the Relay is in failure mode (3-5 Closed) to indicate a battery with very low voltage.

No. 9: Charging Level Current:



It is possible set the max recharging current for the batteries by trimmer (Charging Level). The current adjustment goes from 10% + 100% of In. Set the maximum charging current between 10% and 20% of the battery capacity.


Charging Curve

Automatic multi-stage operation and real time diagnostic allows fast recharge and recovery of deep discharged batteries, adding value and reliability to the system hosting the CB device. The type of charging is Voltages stabilized and Current stabilized IUoILO.

Four charging modes are identified by a flashing code on a Diagnosis LED.

To maintain the Output Load in lower Voltage state, don't put jumper in position 4, in this case no boost charge but only Float charge.

	State	Diagnosis LED	Battery Fault LED
	Trickle/Float	1 Blink/ 2 sec	OFF
Charging Type	Absorption	1 Blink/sec	OFF
Charging Type	Boost	2 Blink/sec	OFF
	Recovery	5 Blink/sec	OFF

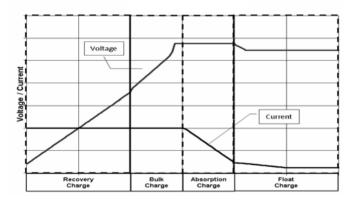

Battery Care

The Battery Care philosophy is base on algorithms that implement rapid and automatic charging, battery charge optimization during time, flat batteries recovery and real time diagnostic during installation and operation. The Real Time Auto-diagnostic system, monitoring battery faults such as, elements in short circuit, accidental reverse polarity connection, disconnection of the battery, they can easily be detected and removed by help of Blink Code of Diagnosis Led; during the installation and after sell. Each device is suited for all battery types, by means of purpers it is possible setting predefined curves for Open Lead Acid, Sealed Lead Acid, Gel, Ni-Cd(option). They guarantees battery reliability in time by continuously testing the internal impedance status, avoids any possible risk of damages and grants also a permanent, reliable and safe connection of the battery to the power supply. The system, through a battery stimulation circuit with algorithms of evaluation of the detected parameter, is able to recognize batteries with a short-circuited element. Battery test: Automatic.

Every time a battery will be connected to the Battery Charger, the device will do followings check: reverse battery polarity, wrong battery connected (like batteries 24 – 36Vdc or higher) with Jumper n.5 not present = Battery charger for 12Vdc. After 120 minutes, with jumper in pos. 5 present (24 Vdc output configuration) the device make the test of wrong battery connected like batteries 12Vdc.

Every 240 minutes, make the test element in short circuit.

Diagnostic Type Checks:

Check for accidental disconnection of the battery cables:

The device detects accidental disconnection and immediately switched off the output power.

Battery not connected:

If the battery is not connected no output power.

Reverse Polarity check:

If the battery it is connected with inverted polarity, the device is automatically protected.

Test of battery voltage connections: Appropriate voltage check, to prevent connection of wrong battery types, more or less than the nominal voltage.

End of Charge check

When the battery it is completely full, the device automatically switch in trickle charging mode.

Check for Battery Cells in short circuit

Thanks to specific algorithms of evaluation, the CBs recognize batteries with cells in internal short circuit. In trickle charge every 4 hours test of element in short circuit.

Diagnosis of battery and device

All CB devices support the user during installation and operation. A Blink code of Diagnosis Led allows to discriminate among various possible faults.

Error conditions, "LED Battery Fault" ON and "LED Diagnosis" blinking with sequence; see Display Signal section.

Protection Features

On the primary side: the device is equipped whit an internally fuse. If the internal fuse is activated, it is most probable that there is a fault in the device. If happen, the device must be checked in the factory.

On the secondary side Battery and load: The device is electrically protected against short circuits and overload.

Inversion polarity: the module it is automatically protected against inversion of battery polarity and connection of load inverted.

Over current and output short circuit: the unit limits the output current (see the technical data).

Thermal behaviour

Surrounding air temperature 50°C. For ambient temperature of over 50°C, the output current must be reduced by 2.5% per °C. Max 70°C At the temperature of 70°C the output current will be 50% of In. The equipment does not switch off in case of ambient temperature above 70°C or thermal overload. The devices are protected for Over temperature conditions "worst case"; in this situations the device Shut-down the output and automatic restart when temperature inside fall.

Standards and Certification

Electrical Safety:

Assembling device: IEC/EN 60950 (VDE 0805) and EN 50178 (VDE 0160). Installation according: IEC/EN 60950.

Input / Output separation: SELV EN 60950-1 and PELV EN 60204-1. Double or reinforced insulation. EMC Standards Immunity:

EN 61000-4-2. EN 61000-4-3. EN 61000-4-4. EN 61000-4-5.

EMC Standards Emission:

EN 61000-6-4, EN 61000-6-3, EN 61000-3-2 (see data sheet for each device)

Standards Conformity:

Safety of Electrical Equipment Machines: EN 60204-1.

€ The CE mark in According to EMC 2004/108/EC and Low voltage directive 2006/95/EEC

Norms and Certifications

In Conformity to: UL1236, IEC/EN 60335-2-29 Battery chargers; EN60950 / UL1950; Electrical safety EN54-4 Fire Detection and fire alarm systems: 89/336/EEC EMC Directive: 2006/95/EC (Low Voltage); DIN41773 (Charging cycle); Emission: IEC 61000-6-4; Immunity: IEC 61000-6-2. CE.

Rail Mounting:




All modules must have a minimum vertical and horizontal distance of 10 cm to this power supply in order to guarantee sufficient auto convection. Depending on the ambient temperature and load of the device, the temperature of the housing can become very high!

Mounting Steps: 1, 2, 3, 4.

Removing Steps: 4, 3, 2, 1.

MOUNTING - REMOVING

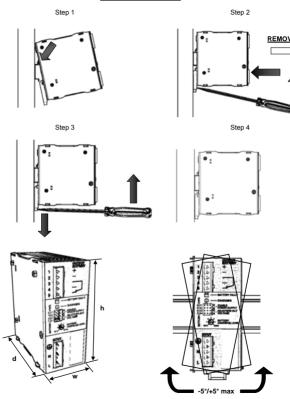



CB Battery Charger	Multivoltage 12 – 24Vdc		
nput (Volt)	115 – 230 – 277Vac	115 – 230 – 277Vac	
Output (Vdc – A – W)	12Vdc - 3A - 72W 24Vdc - 3A - 72W	12Vdc - 6A - 120W 24Vdc - 5A - 120W	
Model	CB12243A	CB12245A	
NPUT DATA			
Nominal Input Voltage / Tensione d'ingresso nominale	115 - 230 - 277Vac	115 - 230 - 277Vac	
nput Voltage Range / Campo di funzionamento	90 – 305Vac	90 – 305Vac	
nrush Current (Vn and In Load) I ² t / Corrente di Inserzione Frequency /Frequenza di Ingresso	≤ 16 A ≤ 5msec 47 – 63 Hz ±6%	≤ 16 A ≤ 5msec 47 – 63 Hz ±6%	
nput Current (115 – 230Vac) / Assorbimento	1.4 – 0.7A	2.4 – 1.2A	
nternal Fuse / Fusibile Interno (non sostituibile)	4A	4A	
External Fuse (recommended)/ Fusibile Esterno raccomandato	10A (MCB curve B)	10A (MCB curve B)	
DUTPUT DATA			
Output Vdc / I _N / Tensione di uscita Vdc / I _N	12Vdc – 3A 24Vdc – 3A	12Vdc – 6A 24Vdc – 5A	
Minimum load / Carico minimo	No No	No No	
Efficiency (50% of In) / Rendimento tipico	≥ 90%	≥ 90%	
Short-circuit protection / Protezione contro il corto circuito	Yes	Yes	
Over Load protection / Protezione sovraccarico	Yes	Yes	
Over Voltage Output protection / Protezione sovratensione in uscita	Yes	Yes	
Reverse battery protection / Protezione inversione batteria Detection of element in short circuit / Relevazione elemento in corto circuito	Yes Yes	Yes Yes	
BATTERY CHARGER OUTPUT / USCITA CARICA BATTERIA	100	1.00	
Boost – Bulk charge (Typ. at I _N) / Carica Veloce (1)	14.4Vdc (12Vdc)	14.4Vdc (12Vdc)	
	28.8Vdc (24Vdc)	28.8Vdc (24Vdc)	
Max.Time Boost–Bulk charge (Typ. at I _N) / Tempo massimo Carica Veloce Min.Time Boost–Bulk charge (Typ. at I _N) / Tempo minimo Carica Veloce	15h 4 min.	15h 4 min.	
Frickle-Float charge (Typ. at I _N) / Carica di mantenimento (1)	13.75Vdc (12Vdc)	13.75Vdc (12Vdc)	
	27.50Vdc (24Vdc) 2 – 7 Vdc (12Vdc)	27.50Vdc (24Vdc) 3 – 8 Vdc (12Vdc)	
Recovery Charge / Carica di recupero	2 – 16 Vdc (24Vdc)	6 – 18 Vdc (24Vdc)	
Suggested Battery Type up to (for recharging in 10 - 14 hours)			
Switching on after applying mains voltage		2.5sec	
End of charging current Bulk - Absorption to Float - Trickle Start up with capacitive load / Start up con carichi capacitivi		1/8 of ladj	
Residual Ripple / Ripple Residuo		≤ 30.000μF ≤ 80 mVpp	
	6A ± 5% (12Vdc)	6A ± 5% (12Vdc)	
Charging max I _{batt} / Corrente max. di Carica	5A ± 5% (24Vdc) T<40°C (In)	5A ± 5% (24Vdc) Ta < 40°C (In) 3.5A ± 5% (24Vdc) Ta > 40°C (In)	
Charging current Limiting I _N (I _{adj}) / Limitazione Corrente di Carica Quieshent Current / Consumo da batteria max.	Yes, 10 ÷ 100 % / In	Yes, 10 ÷ 100 % / In	
JUMPER CONFIGURATION	≤5mA	≤5mA	
	2.23;2,25;2,27;2,3;	2.23;2,25;2,27;2,3; 1,41–1,5 (20	
Battery Type / Tipo Batteria	1,41–1,5 (20 elem.)	elem.)	
Battery Voltage 12 or 24 Vdc / Selezione Tensione di Batteria 12 o 24 Vdc Power Supply Function / Funzione Alimentatore	Yes Yes	Yes Yes	
Boost Charge Enable / Abilitazione Carica Rapida	Yes	Yes	
Characteristic Curve / Caratteristiche di Carica		UoUo - 4 stage	
	l I	=	
SIGNAL OUTPUT (RELAY) / SEGNALAZIONE RELÈ USCITA	I		
SIGNAL OUTPUT (RELAY) / SEGNALAZIONE RELÈ USCITA Main or Backup Power	No	No	
		No No	
Main or Backup Power	No		
Main or Backup Power Low Battery and Fault Battery	No No	No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Femp. Charging probe / Carica Compensata in Temperatura	No No Yes	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Femp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica	No No Yes No No	No Yes No No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno	No No Yes	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Femp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION)	No No Yes No No	No Yes No No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura	No No Yes No No	No Yes No No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura	No No Yes No No	No Yes No No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura	No No Yes No No No No	No Yes No No No No	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Femp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Femp.Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro	No No No Yes No	No Yes No No No No No No No N	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac	No No No Yes No No No No No So So So So Yes	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //Oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino	No No No Yes No No No No No Ves 45 - +70°C > 50° 2.5% °C Yes 40 - +85°C	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità	No No No Yes No No No No No So So So So Yes	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento	No No No Yes No No No No No Ves 45 - +70°C > 50° 2.5% °C Yes 40 - +85°C	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA	No No No Yes No No No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino -tumidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT)	No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	No Yes No No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Femp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DOPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Femp.Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating at 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento SENERAL DATA solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento (IN / TERRA)	No No No Yes No No No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	No Yes No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura /oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino -tumidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT)	No No No Yes No No No No No No Accordance -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C 3000Vac 1605Vac	No Yes No No No No No Ves -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C 3000Vac 1605Vac	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T³ > (In) / De rating T³ > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cololing / Raffreddamento SENERAL DATA solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento(OUT/TERRA)	No No No Yes No No No No No No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C 3000Vac 1605Vac 500Vac	No Yes No No No No No No No N	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery MAIN or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento (OUT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe	No No No Yes No	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / OUT) / Tensione di Isolamento (IN / TERRA) solation Voltage (OUT / PE) / Tensione di Isolamento (OUT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe Reliability (MTBF IEC 61709) / Affidabilità Pollution Degree Environment / Grado d'inquinamento ambientale Connection Terminal Blocks Screw Type / Dimensione morsetti	No N	No Yes No No No No No No -25 - +70°C > 50° 2.5% °C Yes -40 - +85°C 95% to 25°C 3000Vac 1605Vac 500Vac IP 20 > 300 000 h	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp.Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (in) / De rating Ta > (in) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento(OUT/TERRA) solation Voltage (OUT / PE) / Tensione di Isolamento(OUT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe Reliability (MTBF IEC 61709) / Affidabilità Profection Terminal Blocks Screw Type / Dimensione morsetti Protection Terminal Blocks Screw Type / Dimensione morsetti Protection Class (with PE connected) /	No No No No Yes No	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Humidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / OUT) / Tensione di Isolamento (IN / TERRA) solation Voltage (OUT / PE) / Tensione di Isolamento (OUT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe Reliability (MTBF IEC 61709) / Affidabilità Pollution Degree Environment / Grado d'inquinamento ambientale Connection Terminal Blocks Screw Type / Dimensione morsetti	No N	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //Oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating T* > (In) / De rating T* > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino Aumidity at 25 °C / Umidità Cooling / Raffreddamento SENERAL DATA Solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento (IN / TERRA) solation Voltage (OUT / PE) / Tensione di Isolamento (UT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe Reliability (MTBF IEC 61709) / Affidabilità Pollution Degree Environment / Grado d'inquinamento ambientale Connection Terminal Blocks Screw Type / Dimensione morsetti Protection class (with PE connected) / Grado di protezione (con cavo di terra collegato) Dimension (w-h-d)/Dimensioni (I-h-p) mm Weight / Peso	No No No Yes No	No Yes	
Main or Backup Power Low Battery and Fault Battery Main or Backup - Fault Battery Main or Backup - Fault Battery AUXILIARY OUTPUT (RJ 45 CONNECTION) FOR: Temp. Charging probe / Carica Compensata in Temperatura //oltage drop compensation / Comp. Tensione di ricarica Remote monitoring display / Display Esterno DPTIONAL FOR AUXILIARY OUTPUT (RJ 45 CONNECTION) Temp. Charging probe/Carica Compensata in Temperatura CLIMATIC DATA Ambient Temperature operation / Temperatura Ambiente di Lavoro De rating Ta > (In) / De rating Ta > (In) Automatic De rating / De rating Automatico De rating at 115Vac / De rating a 115Vac Ambient Temperature Storage / Temperatura max. Magazzino dumidity at 25 °C / Umidità Cooling / Raffreddamento GENERAL DATA solation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT) solation Voltage (IN / PE) / Tensione di Isolamento (IN / TERRA) solation Voltage (OUT / PE) / Tensione di Isolamento (OUT/TERRA) Protection Class (EN/IEC 60529) / Protezione Classe Reliability (MTBF IEC 61709) / Affidabilità Pollution Degree Environment / Grado d'inquinamento ambientale Connection Terminal Blocks Screw Type / Dimensione morsetti Protection class (with PE connected) / Grado di protezione (con cavo di terra collegato) Dimension (w-h-d)/Dimensioni (I-h-p) mm	No No No No Yes No	No Yes	